



Structural Laminate
Drywall Corner System



ULTRA | ARCH™


Introducing the NEW NO-COAT® ULTRA ARCH

Made with NO-COAT's SLAM™ Technology, ULTRA ARCH's notched flanges flex and conform to any arch. Tape-on design allows for easy, fast installation and creates a perfect, self-forming radius.



Formulated surface paper accepts any texture or paint for a superior aesthetic finish.

Joint paper permanently bonds corner to drywall with All-Purpose mud.

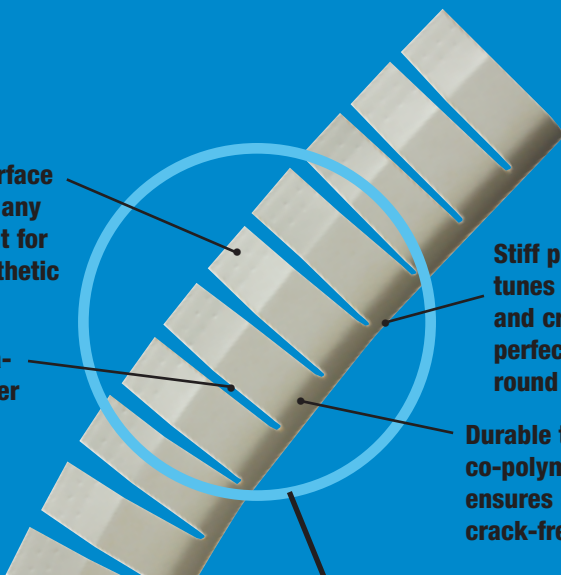

Stiff profile fine-tunes poor framing and creates a perfectly smooth, round curve

Durable tapered co-polymer core ensures seamless, crack-free arches

The industry's ONLY tape-on arch.

- No spray glues
- No staples
- Self-forming, ridgeless design

Install perfect archways in minutes without the hassle of glues, staples and extra coats of mud. ULTRA ARCH completes the NO-COAT Structural Laminate Drywall Corner System with three new profiles:



3/8" Bullnose



3/4" Bullnose



Outside/Inside 90



The only self-forming ridgeless design available - provides perfect, smooth arches everytime!



Made with NO-COAT's SLAM Technology™

ULTRA ARCH's notched flanges flex and conform to any arch. Tape-on design allows for easy, fast installation and creates a perfect, self-forming radius.

- Stiff profile fine-tunes poor framing and creates perfectly smooth, round curve
- Durable tapered co-polymer core ensures seamless, crack-free arches
- Joint paper permanently bonds corner to drywall with All-Purpose mud
- Formulated surface paper accepts any texture or paint for a superior aesthetic finish



THE NEW! ULTRA ARCH™ SERIES

ULTRA ARCH is available in the following industry standard profiles and lengths: (Custom lengths available)

	3/8" BULLNOSE	10' Length	Packaged 10 per Box
	3/4" BULLNOSE	10' Length	Packaged 10 per Box
	OUTSIDE/INSIDE 90	10' Length	Packaged 10 per Box

Tape-on design allows for easy, fast installation and provides a perfect, self-forming radius.



INSTALLATION INSTRUCTIONS:

1. When removing ULTRA ARCH from the box, hold product at the center so that it does not kink.
2. When finishing a bullnose archway, make certain that drywall is flush with the framing, leaving a birdsmouth.
3. Using a 4-6" taping knife, apply a liberal amount of All-Purpose joint compound to the archway. Center ULTRA ARCH on the archway and press into place. With same knife, set arch flanges by skimming archway radius.
4. Use a NO-COAT ULTRATOOL™ Bullnose or Outside 90 Roller to squeeze out remaining excess mud, and let dry.

5. Skim over the archway with joint compound once more with a 4-6" finishing knife. Let dry. Sand and finish.


Use our easy NO-COAT transition caps to complete the corner.

Installation tip: Use ULTRA ARCH Outside 90 for Inside 90 applications. Because of its built-in flexible hinge, it is easy to reverse the angle. Fold along the spine being careful not to crease the paper flanges.

Installation tip: Cut a piece of NO-COAT ULTRATRIM™ Bullnose material and use it as a trowel when applying the second coat of All-Purpose joint compound for more consistent coverage of perforated flanges.

THE NO-COAT® STRUCTURAL DRYWALL CORNER SYSTEM

The NO-COAT Structural Laminate (SLAM™) design is a revolutionary drywall corner system that delivers superior strength and durability, saves mud and labor, and eliminates costly callbacks. The total system includes rolls, pre-cut stick lengths, arch sticks, tools and accessories for easy installation and flawless results.

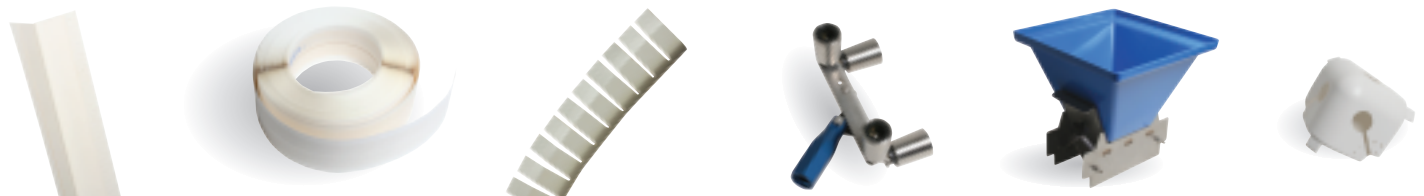

Product Specifications and Submittals located online at www.no-coat.com or call 1-888-662-6281.

The NO-COAT® Warranty
NO-COAT offers an unparalleled lifetime warranty against defects in materials and workmanship.

For more information regarding our warranty, installation, and the complete NO-COAT corner system (including tools and accessories), contact us at 1-888-662-6281 or visit www.no-coat.com.

